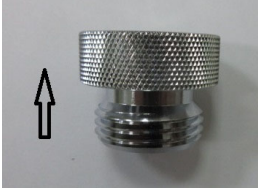
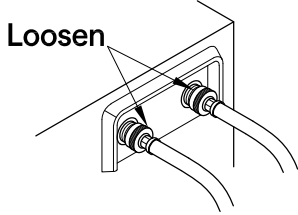
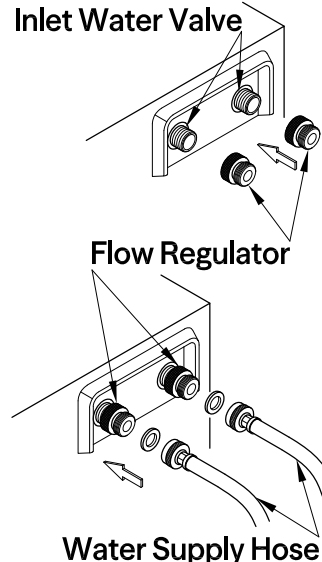
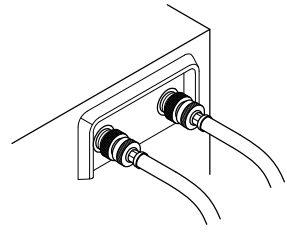


<p><b>1</b></p>		<p><b>Before Installation:</b></p> <ol style="list-style-type: none"> <li>(1) The Flow Regulator features 3/4 NH female outlet and 3/4 NH male inlet. It is intended for keeping water flow-rate stable to be within the range of 2.3-2.4 GPM under water pressure from 20 PSI to 125 PSI.</li> <li>(2) The Flow Regulator is used for washing machine and should be installed between washing machine inlet and supply hose outlet. Make sure the thread sizes can fit it.</li> <li>(3) Do not turn on the water during installation of the Flow Regulator.</li> </ol>
<p><b>2</b></p>		<p>Turn off water shut-off valves completely and disconnect the supply hoses (cold/hot) at the outlet end that is attached to the washing machine.</p>
<p><b>3</b></p>		<p>Thread the Flow Regulators to both cold/hot inlets of the washing machine and tighten it only by hand.  <b>Caution:</b> Do not use wrench to tighten, otherwise it may cause overtightening and break the plastic inlet threads of the washing machine.</p> <p>Then connect the Flow regulators with the outlet adapters of the supply hoses (cold/hot), make sure there are rubber washers inside the adapters.</p>
<p><b>4</b></p>		<p>Turn on your water supply and check for leaks.</p>

### NOTICE

Failure to follow all directions may cause leaks which may result in water damage

[www.kingstonbrass.com](http://www.kingstonbrass.com)

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)

12775 Reservoir Street, Chino, CA 91710