




Tub To Shower Diverter Installation Instructions

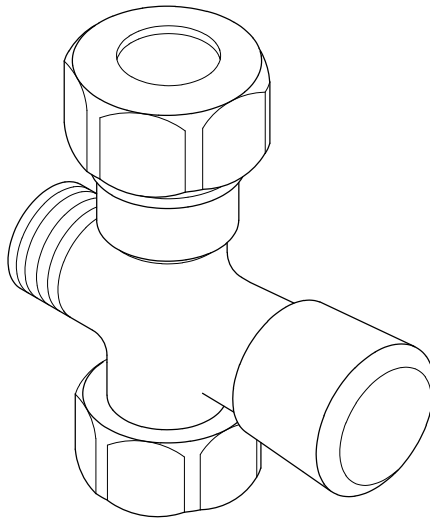

NOTICE

Failure to follow all directions may cause leaks
which may result in water damage

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

Note:

- This diverter is intended for installation between tub faucet with 3/4 NPSM male thread and shower riser with tube 5/8" OD.

Tub or riser with different thread or size may not fit and will cause leakage.

Installation:

1. Install the diverter onto the tub outlet by tightening the swivel nut on the bottom of the diverter with an adjustable wrench.
WARNING: DO NOT OVER-TIGHTEN.
2. Insert the HEX nut, then carefully push the cone washer onto the shower riser.
Make sure the end of riser protruded from the cone washer about 1/2" and the taper surface of cone washer is facing down.
Thread and slowly tighten up the HEX nut on the diverter with an adjustable wrench.
WARNING: DO NOT OVER-TIGHTEN.
3. Connect the shower hose to the 1/2 NPSM male outlet on the side of diverter by hand.
Make sure a rubber washer inside your shower hose adapter.
4. Turn on water, push and pull the diverter handle a few times for the leakage and function test.
Make sure no water leakage on all connection.

