
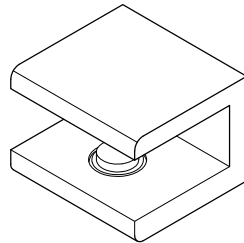


KINGSTON


KITCHEN & BATH

INSTALLATION INSTRUCTIONS

Glass Shelf Clamp

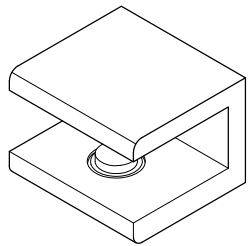

Parts:


Mounting Screw & Anchor	Set Screw	Clear PVC Film
		
2 Pcs	2 Pcs	2 Pcs

www.kingstonbrass.com
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

CAUTION

Failure to follow all installation directions may cause product to detach from the wall and cause serious injury

TOOLS REQUIRED

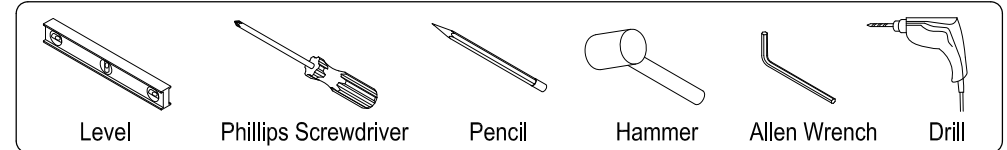

Installation Instructions :

1. Decide on the desired height for your shelf, then use a level to mark a straight line (fig 1).
2. Position your brackets 1-1/2" to 2" from each edge, as recommended. Mark their locations (fig 2).
3. For wall anchors, drill a 3/16" hole and insert the anchor (fig 3 & 4).
4. If attaching to wood bracing, drill 3/32" pilot holes instead.
5. Fasten the brackets by threading the screws into the drilled holes (fig 5).
6. Place the glass shelf on the brackets and insert the PVC films between the brackets and the glass. Secure it by tightening the set screw with the included Allen wrench (fig 6).

Caution: Avoid over-tightening, as this may break the glass.

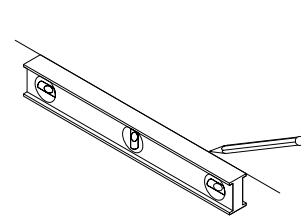


Fig. 1

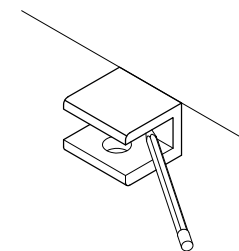


Fig. 2

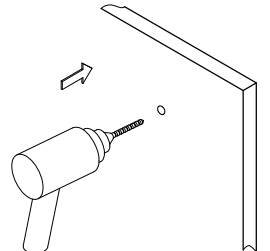


Fig. 3

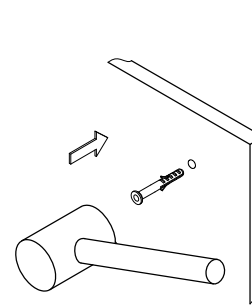


Fig. 4

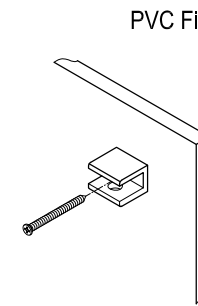


Fig. 5

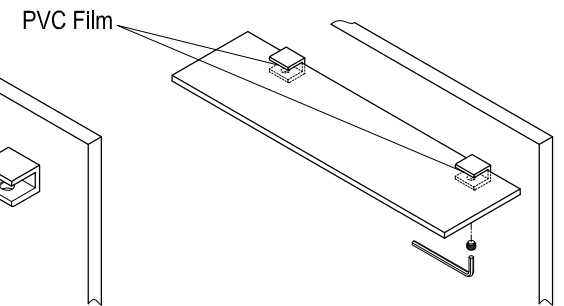


Fig. 6