KINGSTON


KITCHEN & BATH

INSTALLATION INSTRUCTIONS Convert To Shower Unit

BEFORE BEGINNING INSTALLATION:

1. Flush plumbing lines to clear debris in pipe and plumbing lines to avoid existing clogs into waterway & cartridge system of new faucet fixture.

2. Shut off both supply lines after flushing

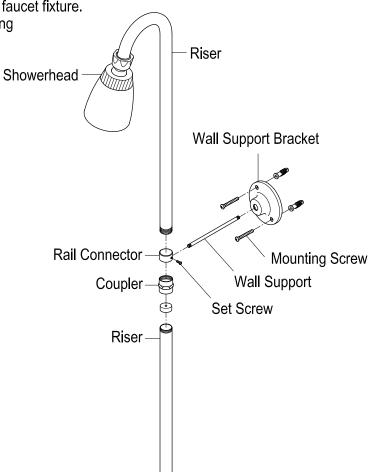

Parts:

<u> </u>		
Mounting Screw & Anchor	Set Screw	
2 Pcs	1 Pc	



www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS


TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA 91710

KINGSTON

INSTALLATION INSTRUCTIONS

D-Type Shower Rod Bath Supply

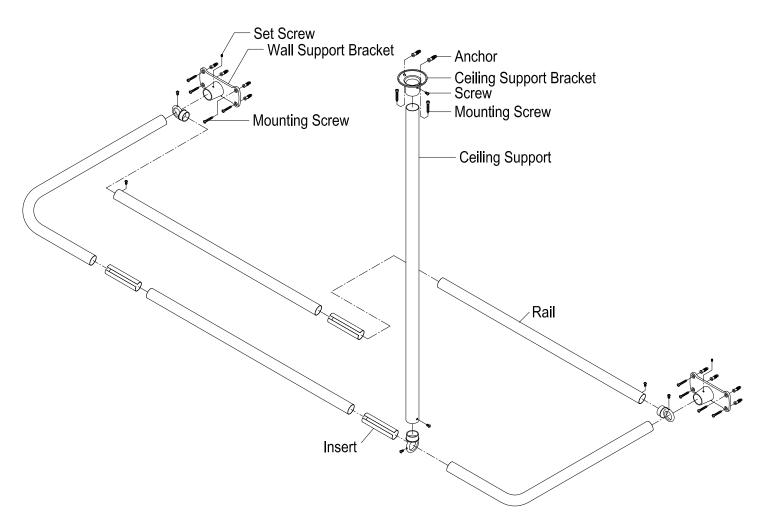

Parts:

Mounting Screw & Anchor	Screw	Set Screw
10 Pcs	7 Pcs	2 Pcs

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA 91710