

KINGSTON

KITCHEN & BATH


INSTALLATION INSTRUCTIONS

Tub Spout

This tub spout is designed for installation on a 1/2" (5/8" O.D.) copper pipe stub out.

Installation Instruction:

1. Prepare a 1/2" copper stub out to protrude from the wall 1-3/4" to 2-3/4", deburr end of the stub out and apply a light coating of petroleum jelly or similar.
2. Apply a small bead of silicone around the back of the spout.
3. Smoothly press spout onto the stub-out until fully inserted
4. Using a Phillips head screwdriver tighten side screw and clean any excess silicone from the perimeter of the spout.

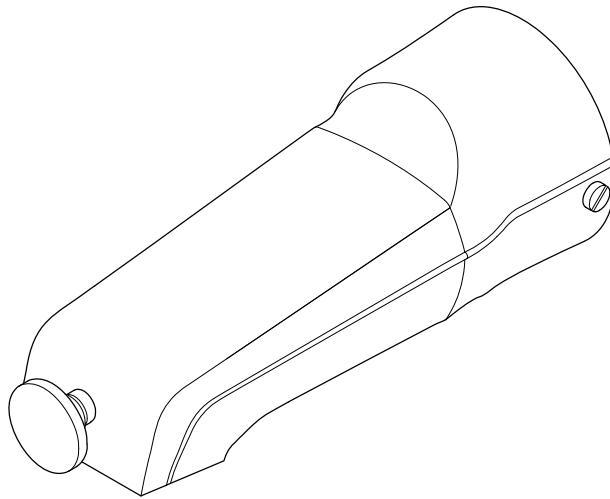

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA 91710

© 2021-05-T Kingston Brass