

KINGSTON

KITCHEN & BATH

INSTALLATION INSTRUCTIONS


Tub Spout with Diverter

Instructions:

1. At the desired location, drill a hole $\text{\O}7/8"$ on the wall.
2. Install flange onto the tub spout and apply Teflon tape onto the male 1/2-NPT threads of tub spout. Make sure the Teflon tape is sufficient (5~8 turns).
3. Apply silicone on the back of spout body and flange.
4. Thread the spout onto the supply elbow by turning clockwise.

Do Not Over Tighten The Thread Connection.

5. Push the flange to against the wall, wipe off excess silicone around the flange.
6. Connect with the shower hose.

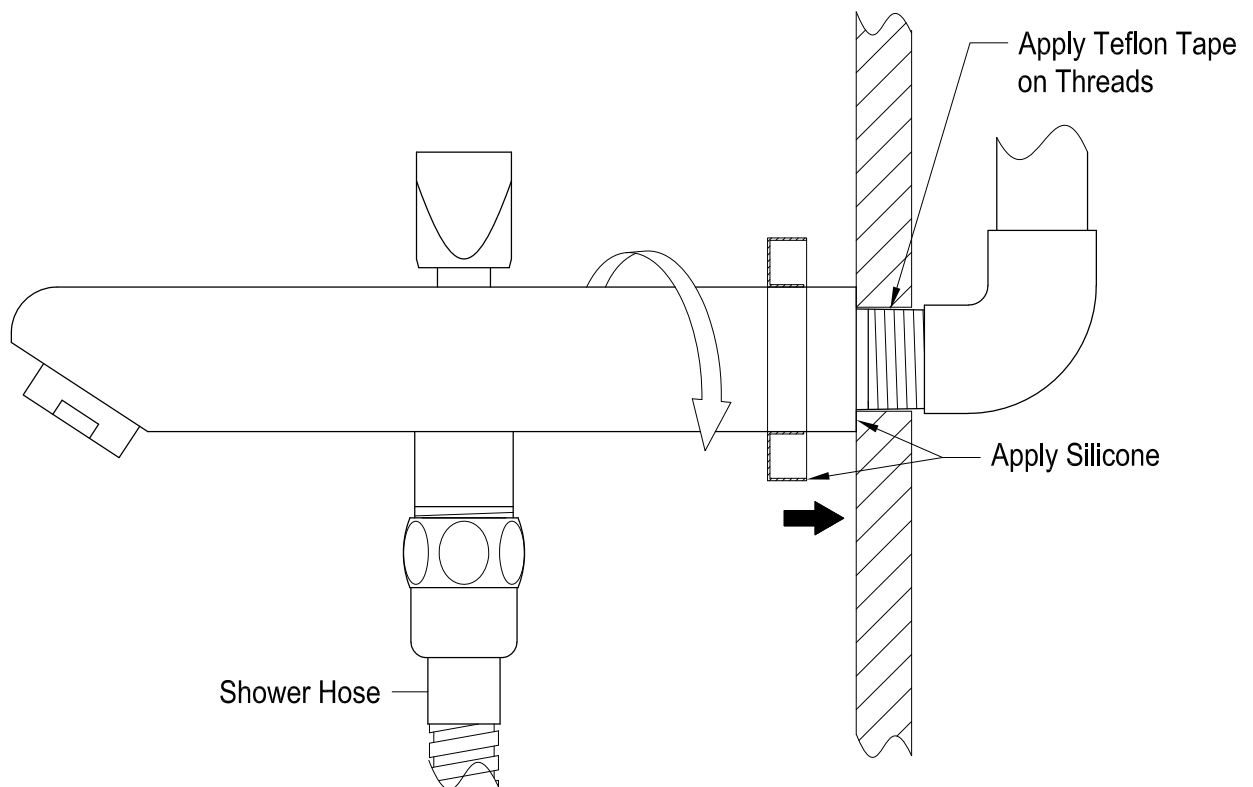

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA 91710

NOTICE

Failure to follow all directions may cause leaks
which may result in water damage

CAUTION

Failure to follow all installation directions may
cause product to detach from the wall and
cause serious injury

© 2023-10-D Kingston Brass