


KINGSTON

KITCHEN & BATH

Ceiling Support Installation

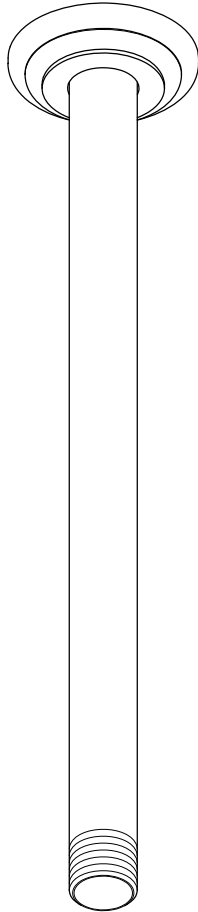

NOTICE


Failure to follow all directions may cause leaks
which may result in water damage

www.kingstonbrass.com
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710


TOOLS REQUIRED



Teflon Tape



Silicone Sealant

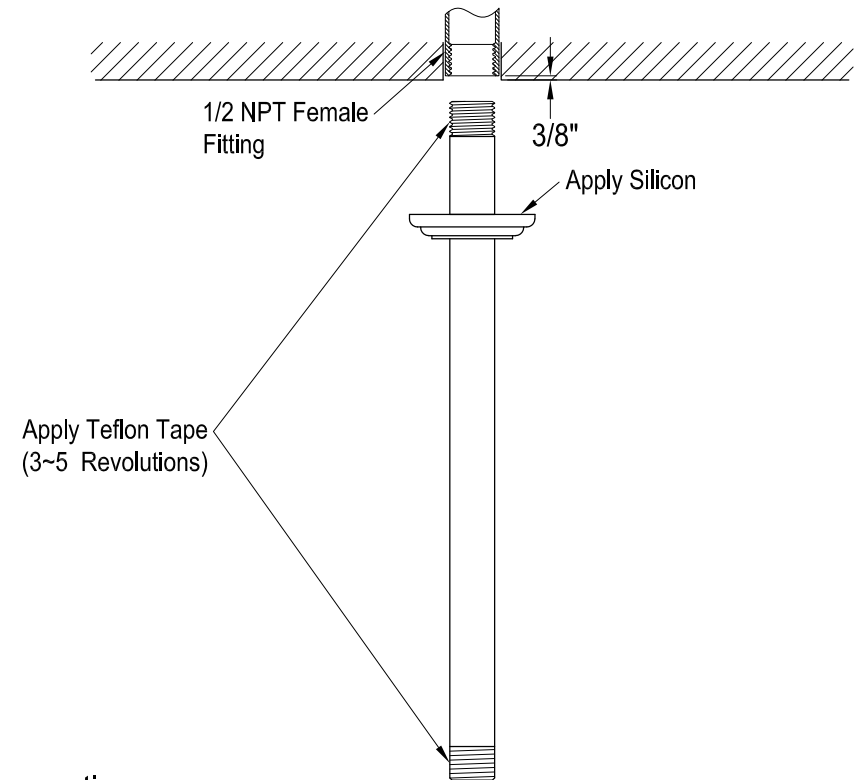

Preparation:

Make sure or install a 1/2 NPT female fitting inside the finished ceiling.

Installation Steps:

1. Insert the flange onto the shower arm.
2. Apply Teflon tape on both 1/2-NPT threads of the shower arm.
3. Apply a small based of silicone base caulking to the perimeter of the flange.
4. Thread shower arm into Female Pipe Fitting within the ceiling by hand .

Warning: Do Not Over-Tighten.

5. Push flange against the ceiling and remove excess caulking.
6. Thread shower onto the shower arm and run water to test if any leakage.

Cleaning

Clean with a damp cloth only.
Avoid using metal or abrasive polishes.