

KINGSTON

KITCHEN & BATH

INSTALLATION INSTRUCTIONS

Shower Elbow


Instructions:

1. Apply Teflon tape on both male threads of the shower arm and the shower elbow.
2. Insert the rubber washer onto the inlet of shower elbow.
3. Thread the shower elbow to the shower arm by hand.
Adjust slightly to make sure the outlet of shower elbow is facing down.

Do Not Over-Tighten.

4. Thread the shower head to the shower elbow by hand.
5. Run water. If leakage found, re-apply Teflon tape and re-tighten up.

Do Not Over-Tighten.

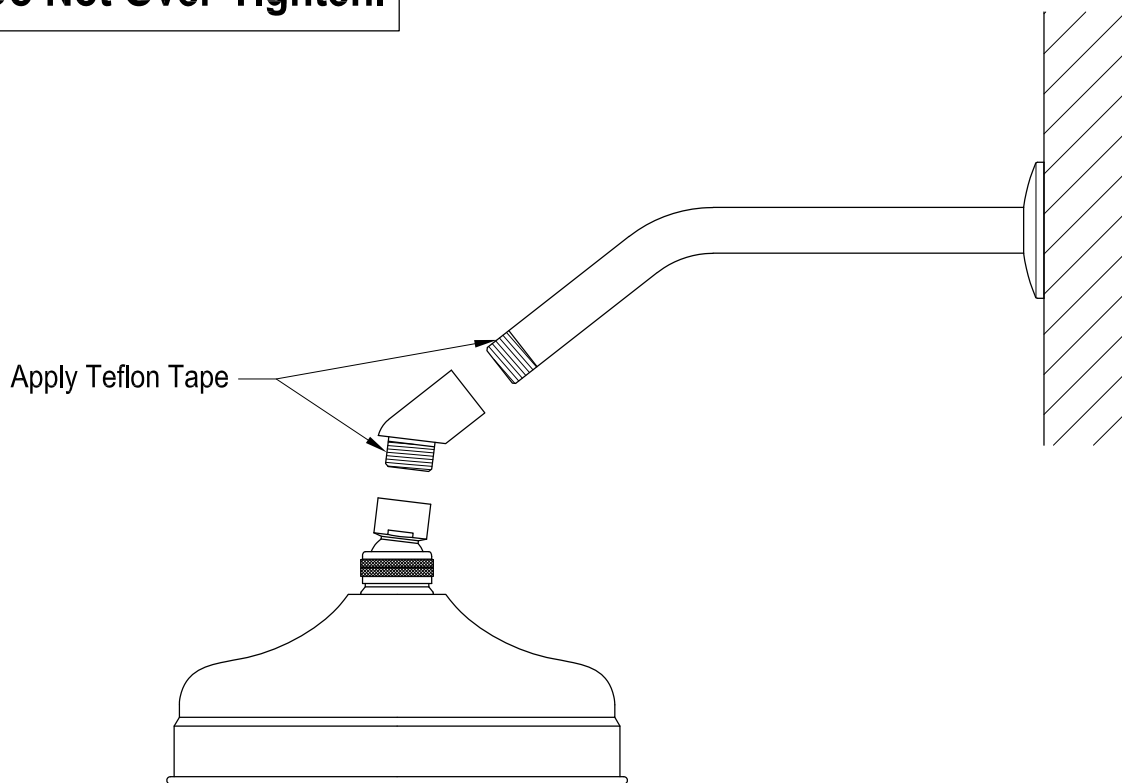

www.kingstonbrass.com
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

NOTICE

Failure to follow all directions may cause leaks
which may result in water damage

CAUTION

Failure to follow all installation directions may
cause product to detach from the wall and
cause serious injury