

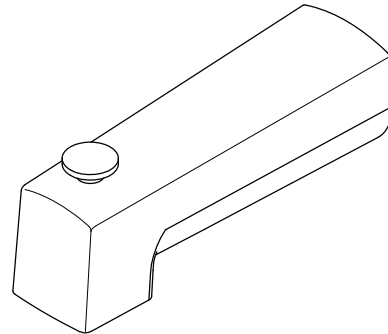


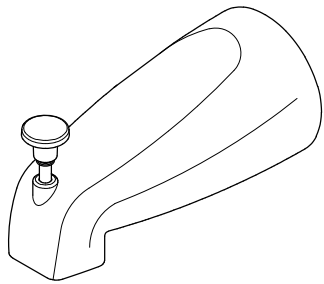

## Tub Spout Installation Instructions

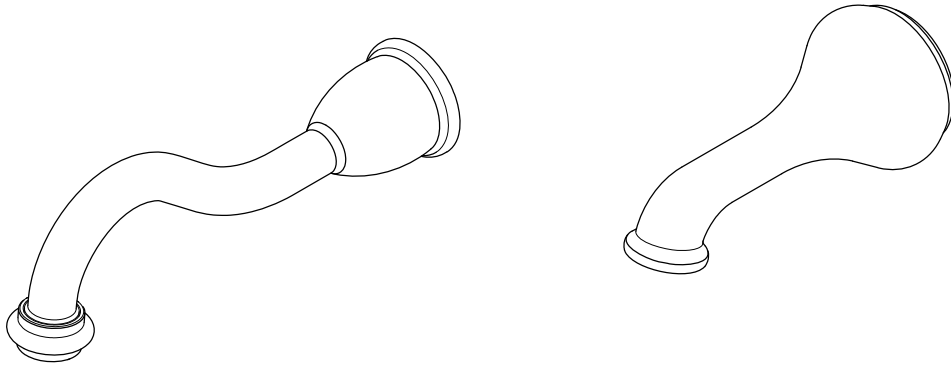

[www.kingstonbrass.com](http://www.kingstonbrass.com)

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS  
TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)  
12775 Reservoir Street, Chino, CA 91710

### NOTICE

Failure to follow all directions may cause leaks  
which may result in water damage


### CAUTION

Failure to follow all installation directions may  
cause product to detach from the wall and  
cause serious injury

## Tools Required







Teflon Tape




Silicone Sealant


Note: This product is used to illustrate  
installation.  
Your product may be a different style but  
will install in the same way.

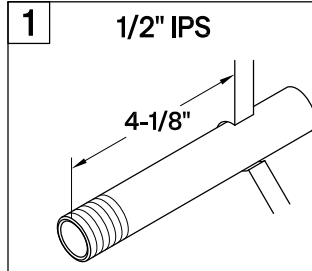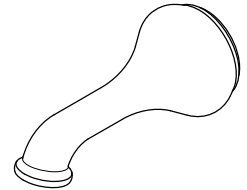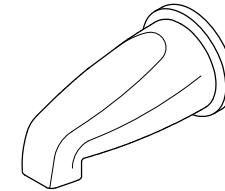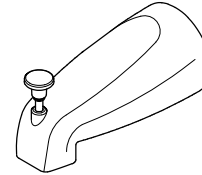


1. The stub-out pipe for spout  
installation must be at the length  
illustrated measured from the  
finished wall surface.

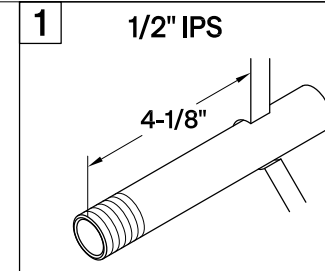


1. The stub-out pipe for spout  
installation must be at the length  
illustrated measured from the  
finished wall surface.

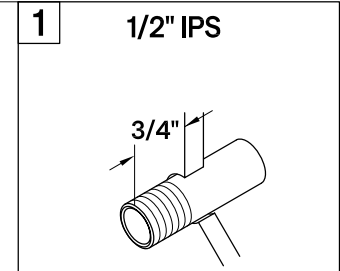


1. The stub-out pipe for spout  
installation must be at the length  
illustrated measured from the  
finished wall surface.

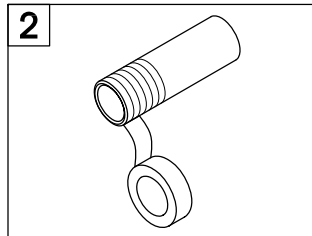


2. Apply pipe Teflon tape on the  
pipe nipple threads.

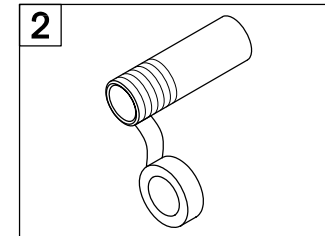


2. Apply pipe Teflon tape on the  
pipe nipple threads.

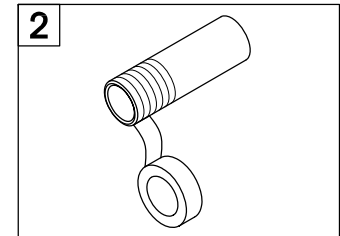


2. Apply pipe Teflon tape on the  
pipe nipple threads.

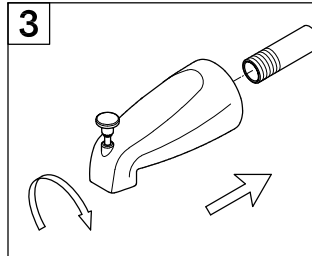




3. Slide the spout over the pipe.  
With the spout tight to the wall,  
tighten the set screw to the pipe.

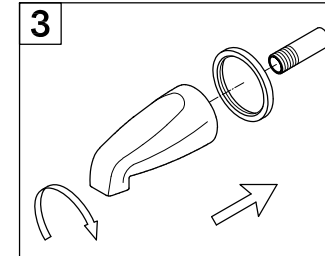


3. Slide the spout and flange over  
the pipe. With the spout tight to  
the wall, tighten the set screw to  
the pipe.

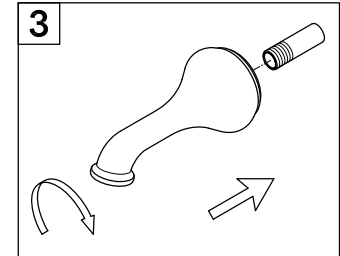


3. Slide the spout over the pipe.  
With the spout tight to the wall,  
tighten the set screw to the pipe.

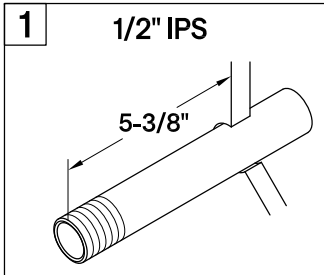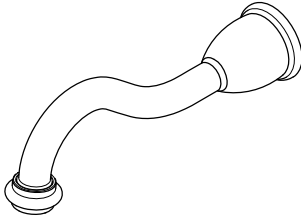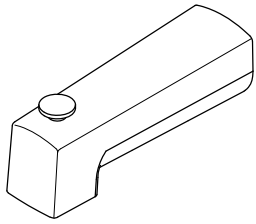


1. The stub-out pipe for spout installation must be at the length illustrated measured from the finished wall surface.

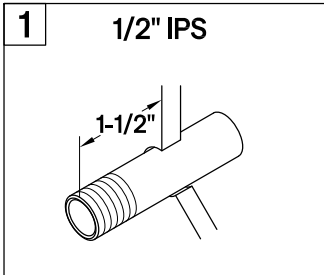


1. The stub-out pipe for spout installation must be at the length illustrated measured from the finished wall surface.

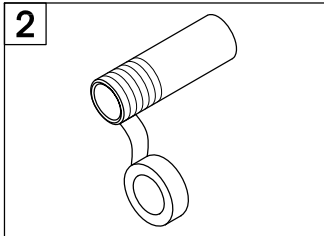


2. Apply pipe Teflon tape on the pipe nipple threads.

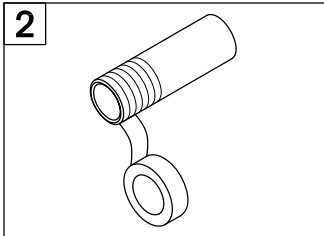

2. Apply pipe Teflon tape on the pipe nipple threads.

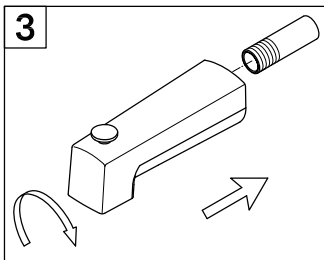

3. Slide the spout over the pipe. With the spout tight to the wall, tighten the set screw to the pipe.

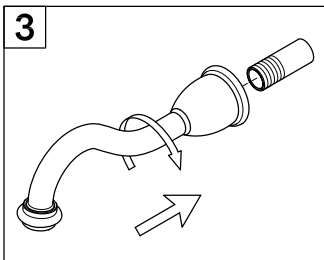

3. Slide the spout over the pipe. With the spout tight to the wall, tighten the set screw to the pipe.