

# KINGSTON


KITCHEN & BATH

## INSTALLATION INSTRUCTIONS

### Shower Volume Control

#### Instructions:

1. Remove the showerhead or hand shower and apply Teflon tape to the shower arm or shower hose threads.
2. Apply Teflon tape to the male threads on the volume control and thread onto the shower arm or shower hose.
3. Thread the shower head or hand shower onto volume control.
4. Open the shower valve and check for leaks.

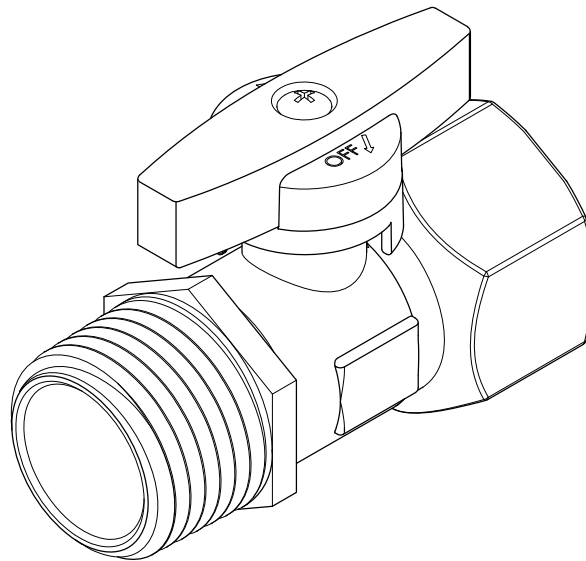

### **NOTICE**

Failure to follow all directions may cause leaks  
which may result in water damage

[www.kingstonbrass.com](http://www.kingstonbrass.com)  
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS  
TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)  
12775 Reservoir Street, Chino, CA 91710