






# Aqua Eden

ELEMENTS OF DISTINCTIVE STYLE

## Acrylic Bath Tub Installation

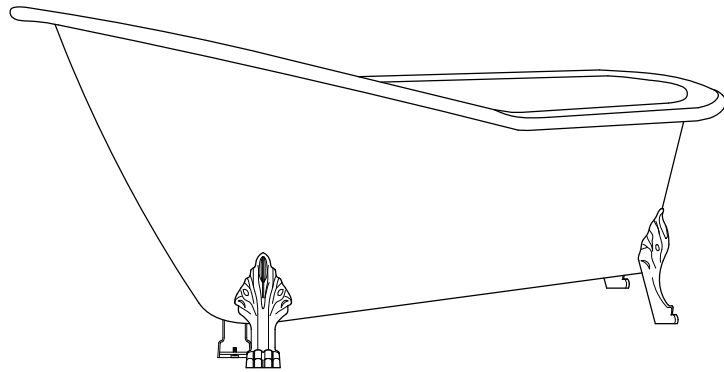

### Parts:

Bolt (M10)	Lock Nut & Washer	Lock Nut & Washer (installed on tub already)	"L" Bracket
			
8 Pcs	8 Pcs	4 Pcs	4 Pcs



### **WARNING**

#### **Lifting hazard.**

Single person lift could cause injury.  
Use assistance when moving or lifting.

www.kingstonbrass.com  
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS  
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com  
12775 Reservoir Street, Chino, CA 91710

### TOOLS REQUIRED




Adjustable Wrench



Rubber Mallet



Rubber Mallet

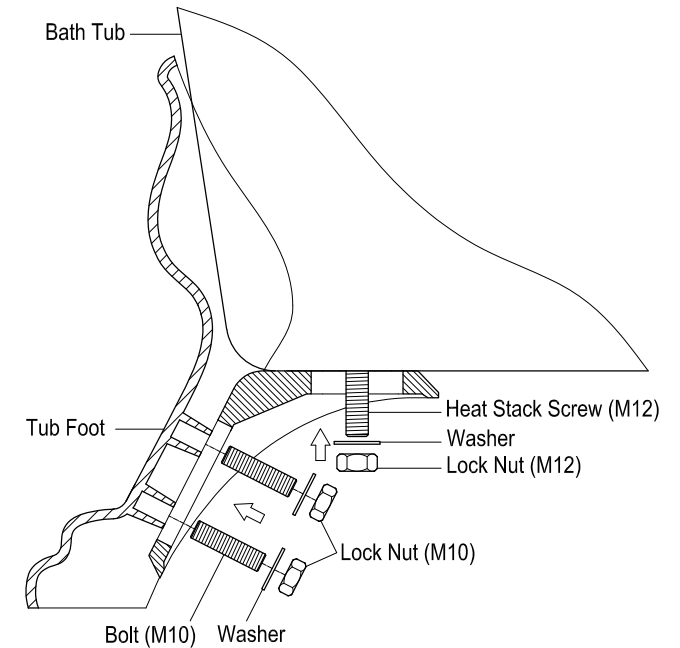

### Installation Steps:

- Step 1. Turn tub over and set on non-abrasive mat, loosen the lock nuts and washers secured on the insert bolts of the tub.
- Step 2. Thread two bolts into the feet with Allen wrench. Align the "L" bracket with the bolt and heat stack screw, insert washers and lock nuts and tighten loosely. When all 4 feet have been installed, tighten the bolts and check the fit.
- Step 3. Adjust leg for proper fit, it might be necessary to tap with rubber mallet to insure a good position.
- Step 4. Retighten bolts.
- Step 5. When all four legs have been installed, turn tub over carefully as not to damage the finish.

### Cleaning

Clean with a damp cloth only.  
Avoid using metal or abrasive polishes.